

Reversibility with Terminator

With this option, customer can choose the polarity of the generator.



Changing the polarity is realized by using a terminator

The machine is delivered with :

- 2 shielded output connectors (PLUS pole and MINUS pole),
- one HV shielded cable and
- one terminator.

The polarity is choosed by plugging the terminator in the selected pole to fix the ground.

*Terminator is connected to minus pole.
POSITIVE output voltage is available
on HV cable.*

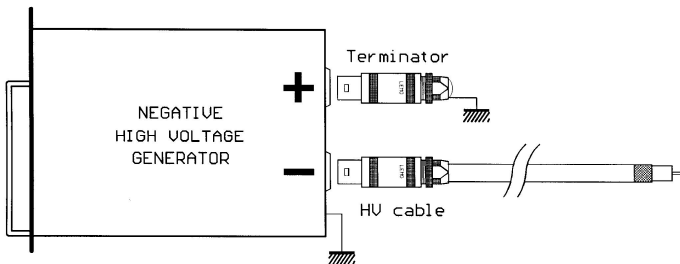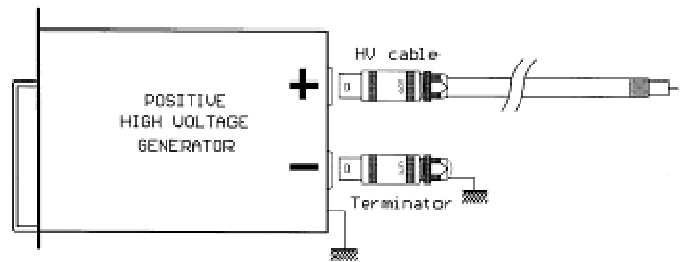

*Terminator is connected to PLUS pole.
NEGATIVE output voltage is available
on HV cable.*

Reference : REVERSIBILITY